


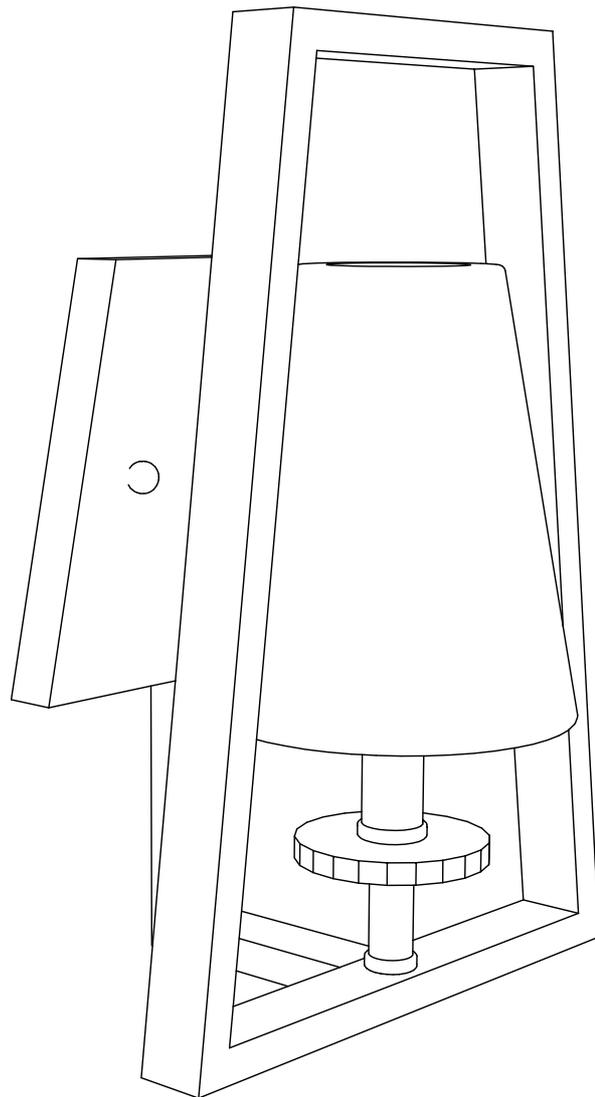

PRODUCT NAME: SWING


ITEM NUMBER: 30251WTPD

Please consult your electrician for hanging fixture and wiring.




E12 1X60W

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation.

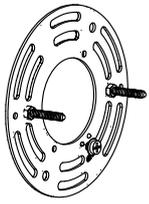

Mounting Strap (A)

 


Body (B)



Candel Tube (C)



Harp (D)


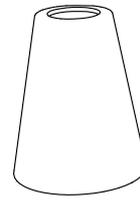


Shade (E)




Nut (F)

Locate all hardware & components before discarding packaging

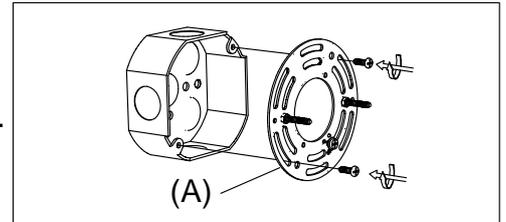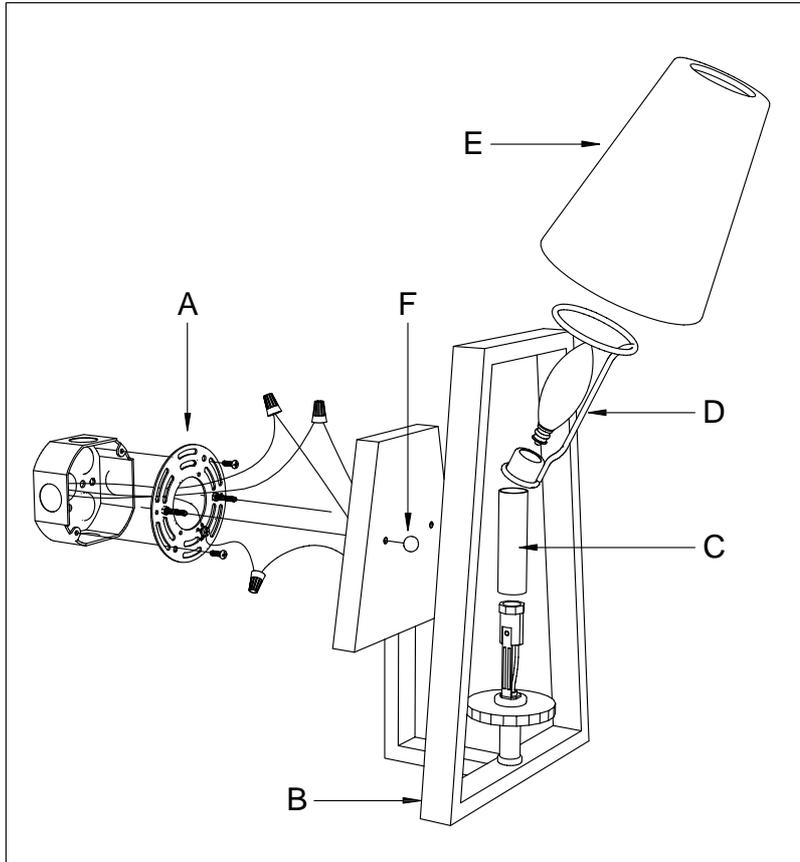


1).

Step.1: Remove mounting bracket (A) from fixture and install to electrical box.

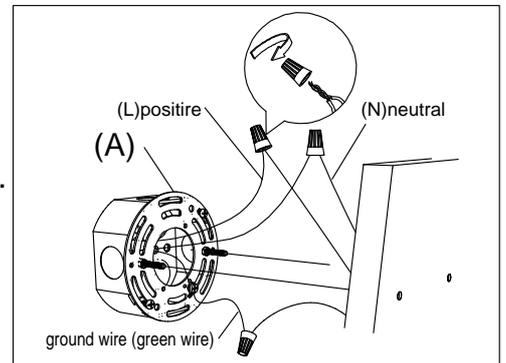

2).

Step.2: Wire fixture to wires in outlet box. Green wire is for Ground.

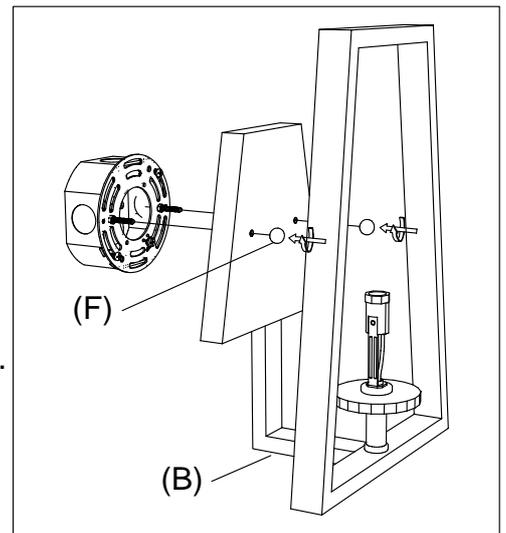

3).

Step.3: Install body (B) to the outlet box and secure with nut(F). Place the Candle Tube (C) over the socket and place Harp (D) on the tube. Install light bulb. Place glass Shade (E) on the harp.

Cleaning & Care:

Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.