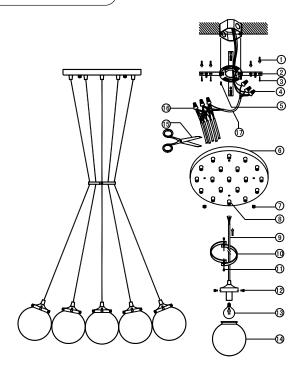# C63019
INSTALLATION INSTRUCTIONS SHEET

START FROM HERE

- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.
  Technical Support:1-844-628-8368

Please Note:
• All Matteo Lighting fixtures come with pre-wired module(s).
• Unless instructed to do so, please do not touch any part of the module(s) as any unnecessary contact with the module could cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED IN A JUNCTION BOX
CE LUMINAIRE DOIT ÊTRE MONTÉ OU SUPPORTÉ DANS UNE BOÎTE DE JONCTION

① Ensure main supply is switched off.

② Aim the mounting bracket(2) to the conjunction box, adjust the hole and mark the point on the wall.

③ Stick the nut(1) into the mark on wall and fit the mounting bracket onto conjunction box with machine screw(5), meanwhile double fix mounting bracket with self-tapping screw(3) to avoid gap.

④ Unscrew the side thread on metal part(8) and make wire(9) across the part and canopy, meanwhile adjust wire length and lock it.(If internal wire is shorter, and not much space for more wire in the canopy, Please cut down extra wires with scissor(15). **WARNING: THIS STEP MUST BE OPERATED BY ELECTRICIAN.**)

⑤ Connect wires with wiring cap(16) per positive and negative terminals in group(5 or 6 internal wires and a lead wire(17) named a group), and then connect wires(2) according to color (White to White, Black to Black). Connect all earth plug together onto the crossbar with green screw to tight.

⑥ Fit the canopy(6) onto mounting bracket with finials(7).

⑦ Install the lamp(13) firmly onto lampholder.

⑧ Fix glass shade(14) onto metal cover with screw(12).

⑨ Bind all wires with semicircle ring(10) and fix 2pcs of half round with screw(11). Please note the ring could be adjusted up and down.

⑩ Reconnect power.

MATTEO